

Canon Papercraft Mini-book

Toy Series

Finger-Tap Sumo


Finger-Tap Sumo is a game that makes use of vibrations.

Tapping on the levers transmits vibrations to the Sumo wrestler figures, causing them to shake and move. The first wrestler to fall down or cross outside the ring is the loser.


So pick your favorite wrestler! The match is about to begin!




Wrestler 1

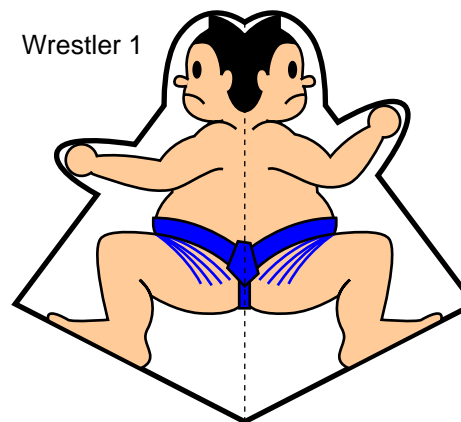

Wrestler 2

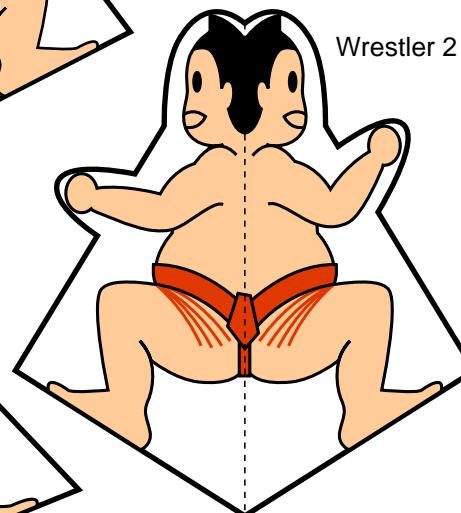

Wrestler 3

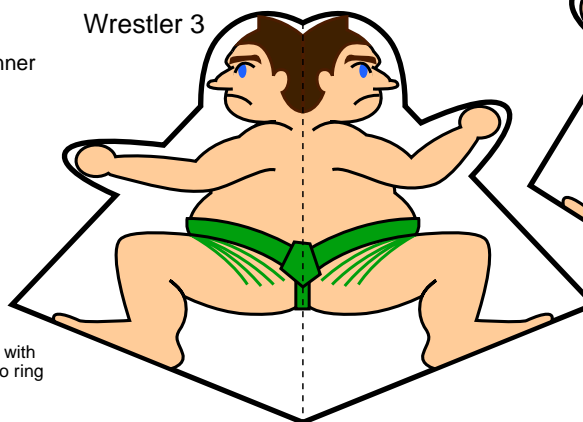


— cut line
- - - mountain fold line

*Cut out the card above and save it. You can collect the cards from each of the Papercraft projects to make your own mini-book!

★ Directions


Print out Section 1 and Section 2. Cut out all the parts, and fold along the mountain fold lines.

1. Sumo ring

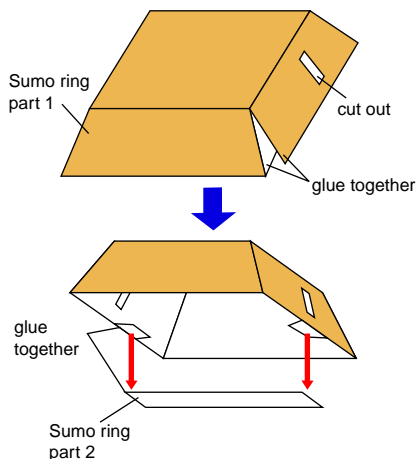



2. Levers

* Build levers 1 and 2 in the same manner

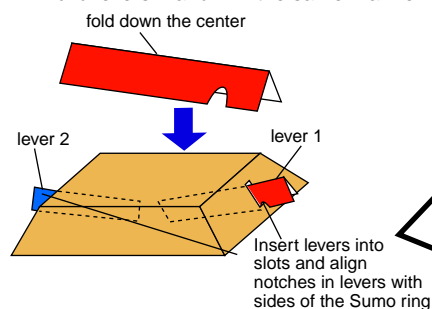


3. Sumo wrestlers

* Build wrestlers 1 through 3 in the same manner

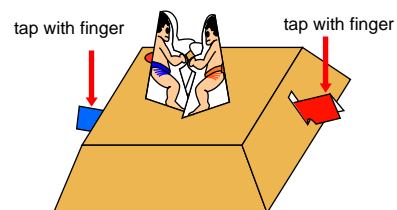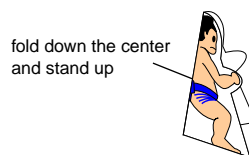

Lever 1

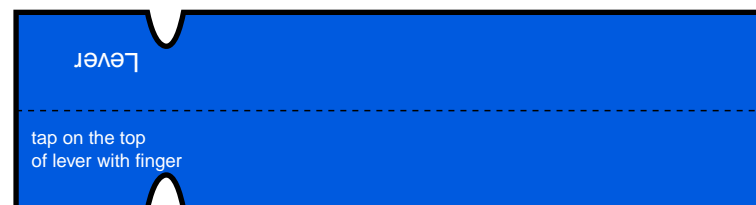

Lever 2

★ How to play:

Sit facing your opponent across the ring. Place your wrestlers facing each other in the ring, as shown.

Tap lightly on the levers with your fingers. The first wrestler to fall over or move outside the ring loses.

