

s imple squarecopper





SIMPLE SQUARETOPPER




Just plop it on the top of your chosen tower. The perfect platform for a group of bowmen to rain down some fiery death!



Cut, sco<mark>re and fold y</mark>our models as noted.

Apply a bead of glue to the reverse upper flap as shown.

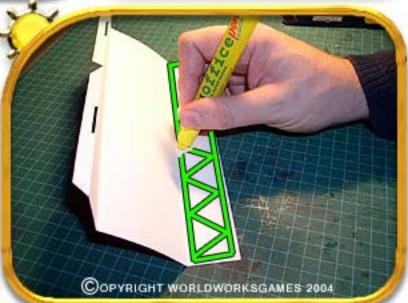



Fold over and apply pressure evenly, being careful to squeeze out any airbubbles.



Apply glue to the opposing side as shown.

Fold over and burnish in place as shown. Be careful not to glue down the bottom tabs (Marked Red). Pull them back slightly while burnishing.

Once dry cut away the white space between crenelations (upper and lower)





Repeat the above steps on both crenelation walls and align them as shown.



Apply glue to the remaining side tabs and affix each wall to the opposing side (as shown)

Fold over and glue the 1.5-inch tower floor. Once dry cut away the white slits on each side.

1-INCH USERS:

Use the 1-inch tower floor instead.





Apply a border of glue to the reverse side of the floor as shown.



Insert the tower floor into the tower crenelations as shown.

Apply pressure to both sides of the floor tabs, working your way around each edge until dry.





Take a few seconds and "Edge" your models with a dark felt. The end result is worth the extra minimal effort!



What is "Edging"? Please refer to the included Beginners Guide for step-by-step instruction.